

Partitioned Side Panel Series — 80cm Width Assembly Booklet

These pages are a translation accompanying the original technical drawings. Detail codes (e.g. A-A) and bolt/nut codes (e.g. M6X15 YB) are kept unchanged from the original; the same codes appear on the technical drawings that follow.

Parts List

1. Upper Ceiling
2. Lower Base
3. Length Upright
4. Rack Upright
5. Cable Pass-Through
6. Side Depth Brace
7. Top/Bottom Depth Brace
8. Upper Side Panel
9. Lower Side Panel
10. Side Partition Panel
11. Rear Panel
12. Glazed Front Door

Assembly Steps

Step 1 — Length Upright

Screw the four uprights one by one to the lower base, as shown in details (Y-Y and Z-Z). Screw them to the upper ceiling in the same way at all four corners.

Note: You can mount the cabinet vertically or horizontally, as preferred.

Step 2 — Cable Pass-Through

Screw the cable pass-through cover in place with the appropriate screw, as shown in detail (X-X). Repeat the same process on both sides.

Step 3 — Side Depth Brace, Top/Bottom Depth Brace

Note: The M6x15 bolts shown in the image are fixed to the inner side of the upper ceiling and lower base. Using these bolts with an M6 nut, fix the top/bottom depth brace to the lower base and upper ceiling as shown in the image.

Screw the side depth brace in place with the appropriate bolt and nut, as shown in detail (A-A). Repeat the same process on the other sides of the side depth brace.

Note: The middle side depth brace is used on cabinets of 34U and above.

Step 4 — Side Partition Panel

Screw the side partition panel in place with the appropriate screw, as shown in detail (C-C). Repeat the same process on the other side of the partition panel.

Note: The side partition panel is used only on 42U 600x1000 and 42U 800x1000 size cabinets.

Step 5 — Rack Upright

Screw the rack uprights to the side depth brace with the appropriate bolt and nut, as shown in detail (H-H).

Repeat the same process at the other corners.

Screw the rack uprights to the lower base and upper ceiling with the appropriate bolt and nut, as shown in detail (G-G). Repeat the same process at the other corners.

Step 6 — Upper Side Panel, Lower Side Panel

Insert the cover-fixing tabs at the bottom of the upper and lower side panels, shown in detail (K-K), into the matching slots in the lower base and the side partition panel. You can then perform the locking process.


Note: The upper and lower side panels are used only on 42U 600x1000 and 42U 800x1000 size cabinets.

Step 7 — Rear Panel, Glazed Front Door


At the top of the glazed front door, pull the spring pin downward and insert it into the pin hole on the upper ceiling, as shown in detail (D-D).

At the bottom of the glazed front door, insert the door's snap pin, shown in detail (F-F), into the matching hole in the lower base.


BÖLMELİ YAN KAPAK SERİSİ
80CM GENİŞLİK MONTAJ KİTAPÇIĞI

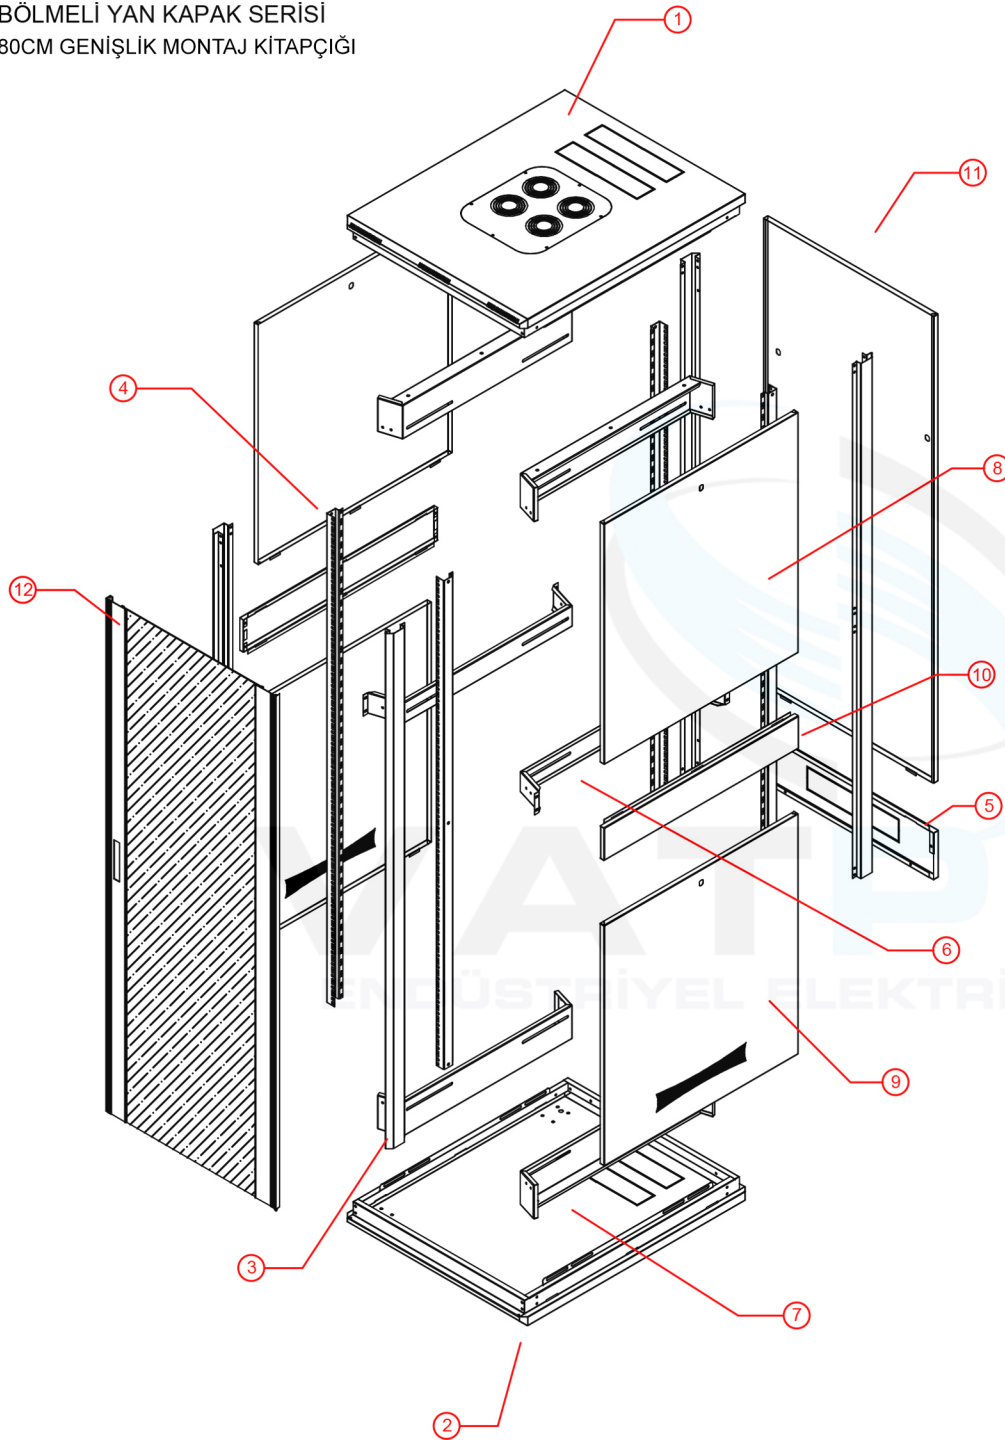




- ① ÜST TAVAN
- ② ALT TABAN
- ③ BOY DİKME
- ④ RACK DİKME
- ⑤ KABLO GEÇİŞ
- ⑥ YAN DERİNLİK ATKI
- ⑦ ALT ÜST DERİNLİK ATKI
- ⑧ YAN ÜST KAPAK
- ⑨ YAN ALT KAPAK
- ⑩ YAN BÖLME
- ⑪ ARKA KAPAK
- ⑫ CAMLI ÖN KAPAK

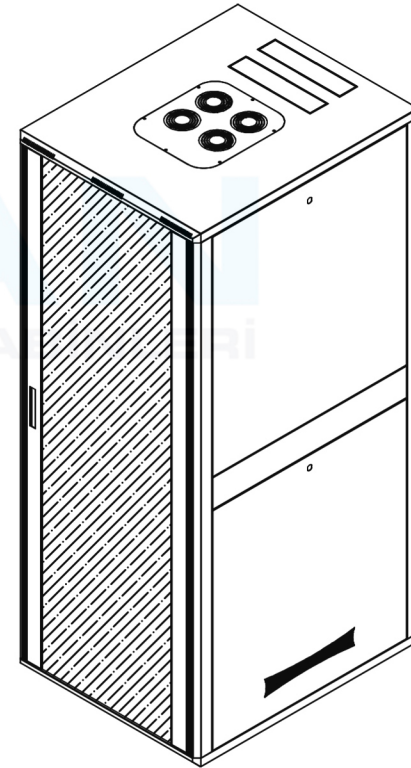

1

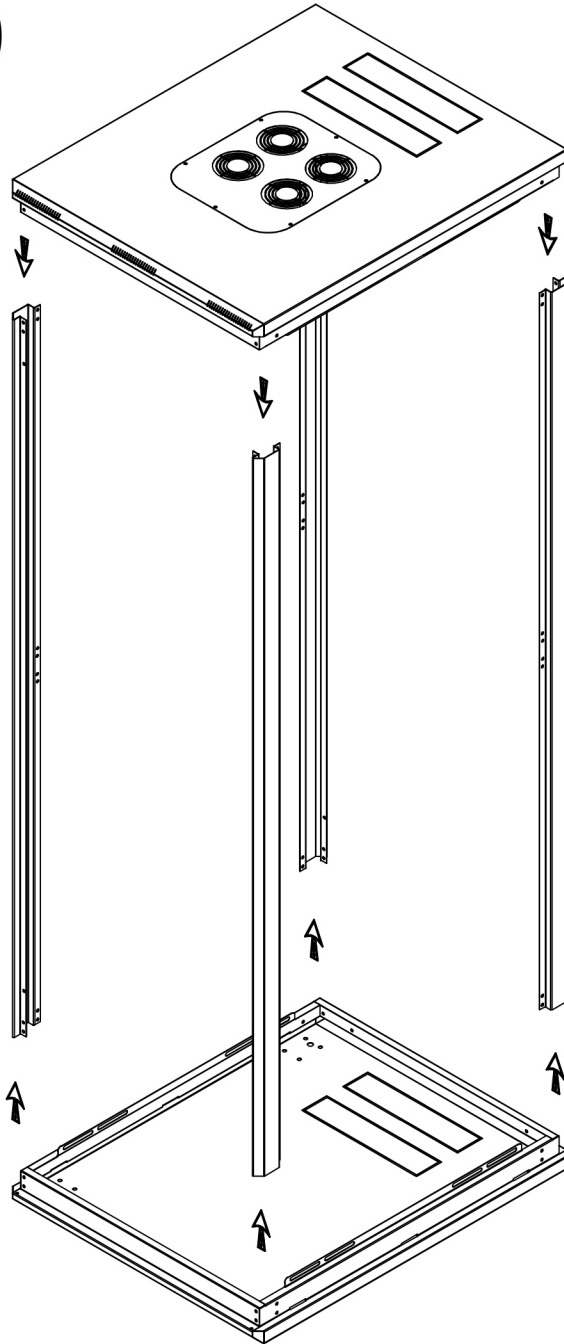


3 BOY DİKME

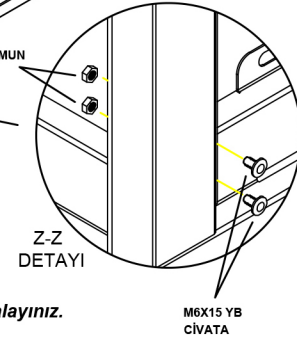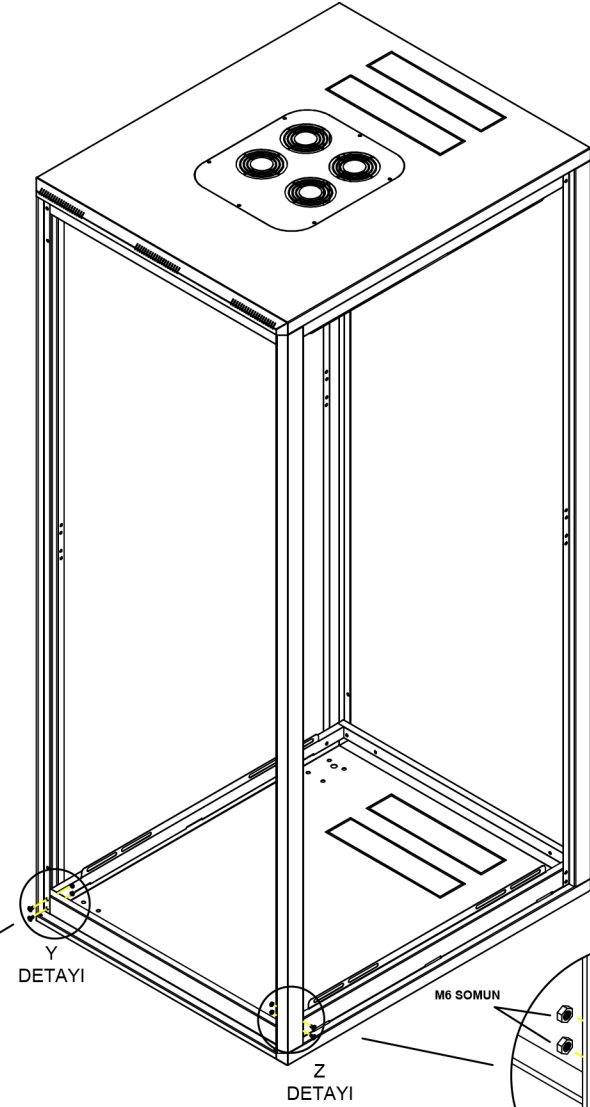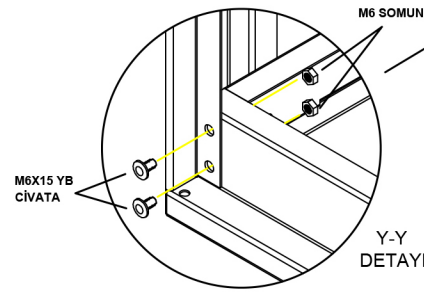

Dört adet dikmeyi (Y-Y VE Z-Z)detaylarında gözüktüğü gibi tek tek alt tabana vidalayınız.
Üst tavanında aynı şekilde dört köşeden vidalayınız.


Not:Kabini isteğinize göre dikey veya yatay konumda montaj yapabilirsiniz.

2

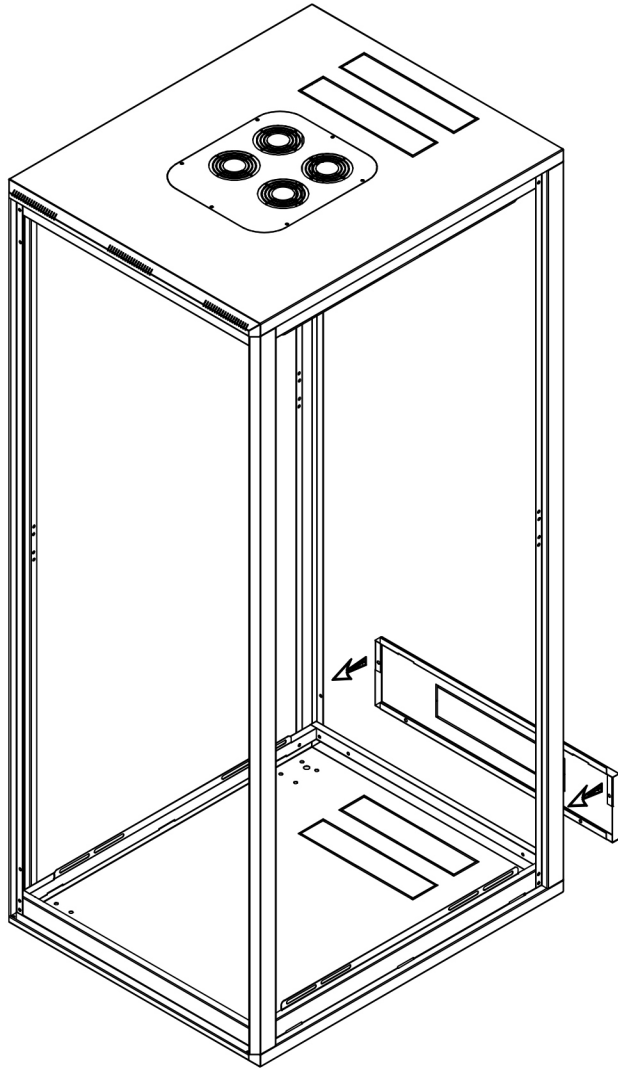

5

KABLO GEÇİŞ

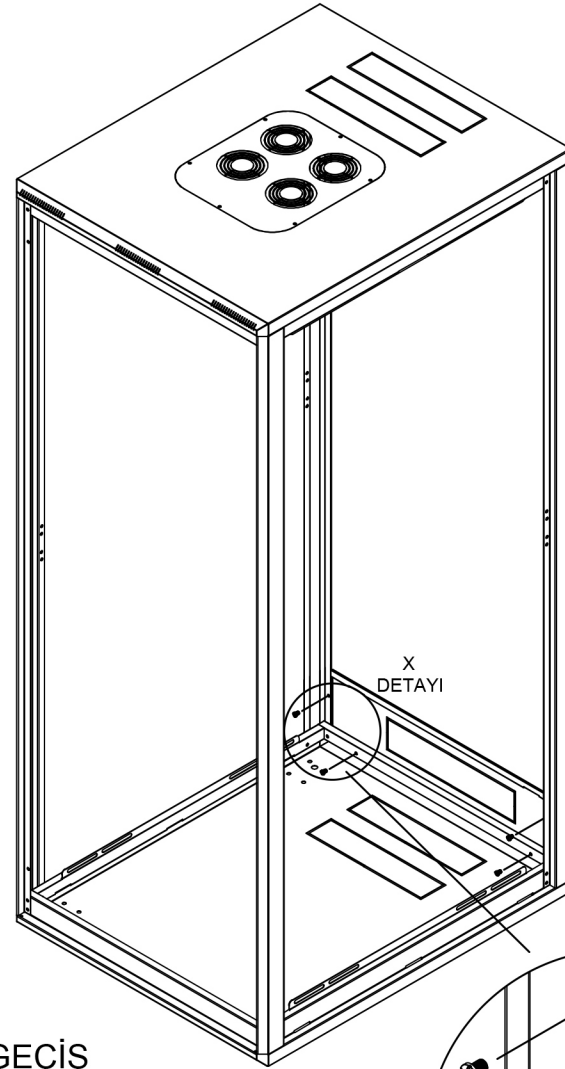

X
DETAYI

M5X15 YSB
CİVATA

X-X
DETAYI

*Kablo geçiş kapagını (X-X) detayında gösterildiği şekilde uygun vida ile vidalayınız.
Her iki tarafada aynı işlemi uygulayınız.*

3

7

ALT ÜST DERİNLİK ATKI

NOT: RESİMDE GÖSTERİLEN M6X15 ÇİVATALAR ÜST TAVAN VE ALT TABANIN İÇ KISMINA SABİTLENMİŞTİR.
ALT TABAN VE ÜST TAVAN DERİNLİK ATKISINI BU ÇİVATALARI KULLANARAK M6 SOMUN İLE ALT TABAN VE ÜST TAVANA RESİMDE GÖSTERİLDİĞİ GİBİ SABİTLİYELİM.

M6X15 YB ÇİVATA
GÖVDEYE SABİTTİR.B-B
DETAYI

M6 SOMUN

A
DETAYI

M6 SOMUN

M6X15 YB
ÇİVATAA-A
DETAYI

6

YAN DERİNLİK ATKI


Yan derinlik atkısını (A-A) detayında gösterildiği şekilde uygun çivata ve somunla vidalayınız.
Yan derinlik atkısının diğer taraflarında aynı şekilde yapınız.

Not: Orta kısımdaki yan derinlik atkısı 34U ve üzeri kabinlerde kullanılmaktadır.

4

10

YAN BÖLME

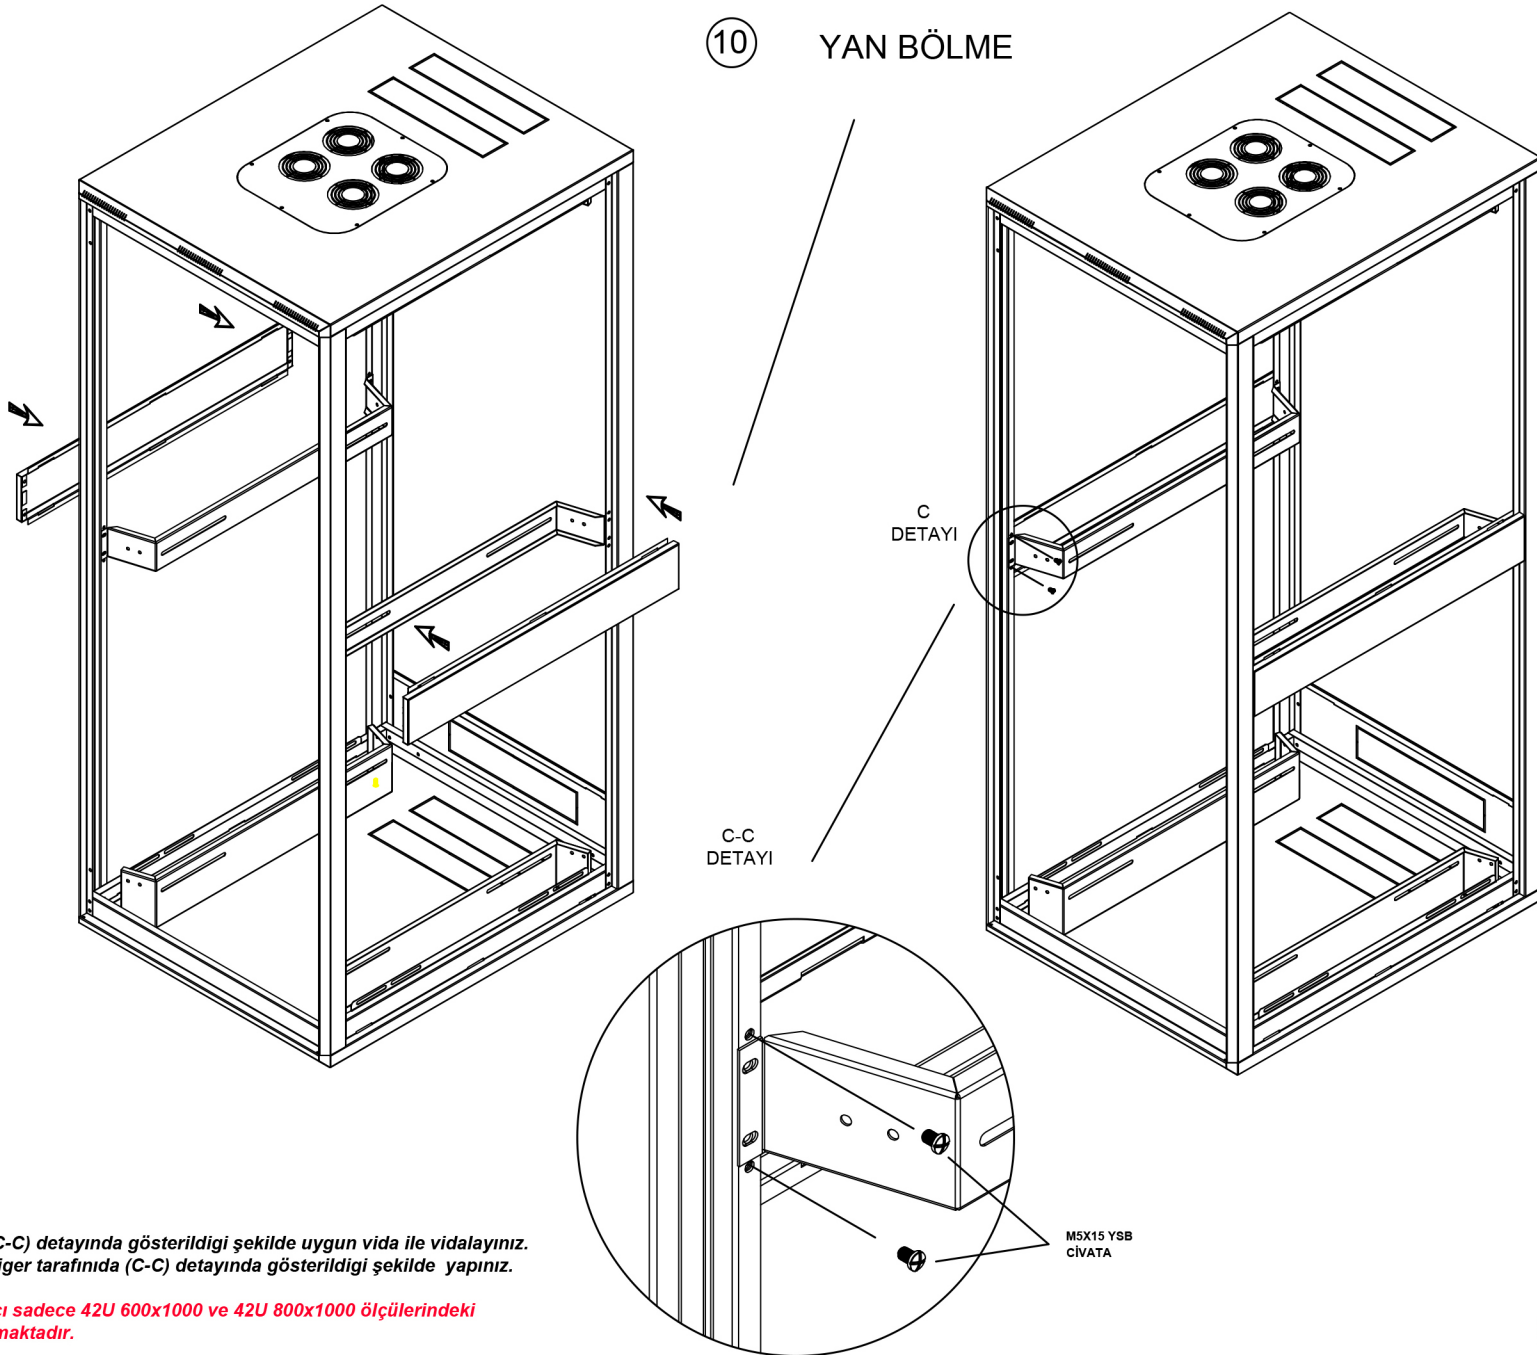


Yan bölme sacını (C-C) detayında gösterildiği şekilde uygun vida ile vidalayınız.
Yan bölme sacını diğer tarafında (C-C) detayında gösterildiği şekilde yapınız.

Not: Yan bölme sacı sadece 42U 600x1000 ve 42U 800x1000 ölçülerindeki kabinlerde kullanılmaktadır.

5

4

RACK DİKME

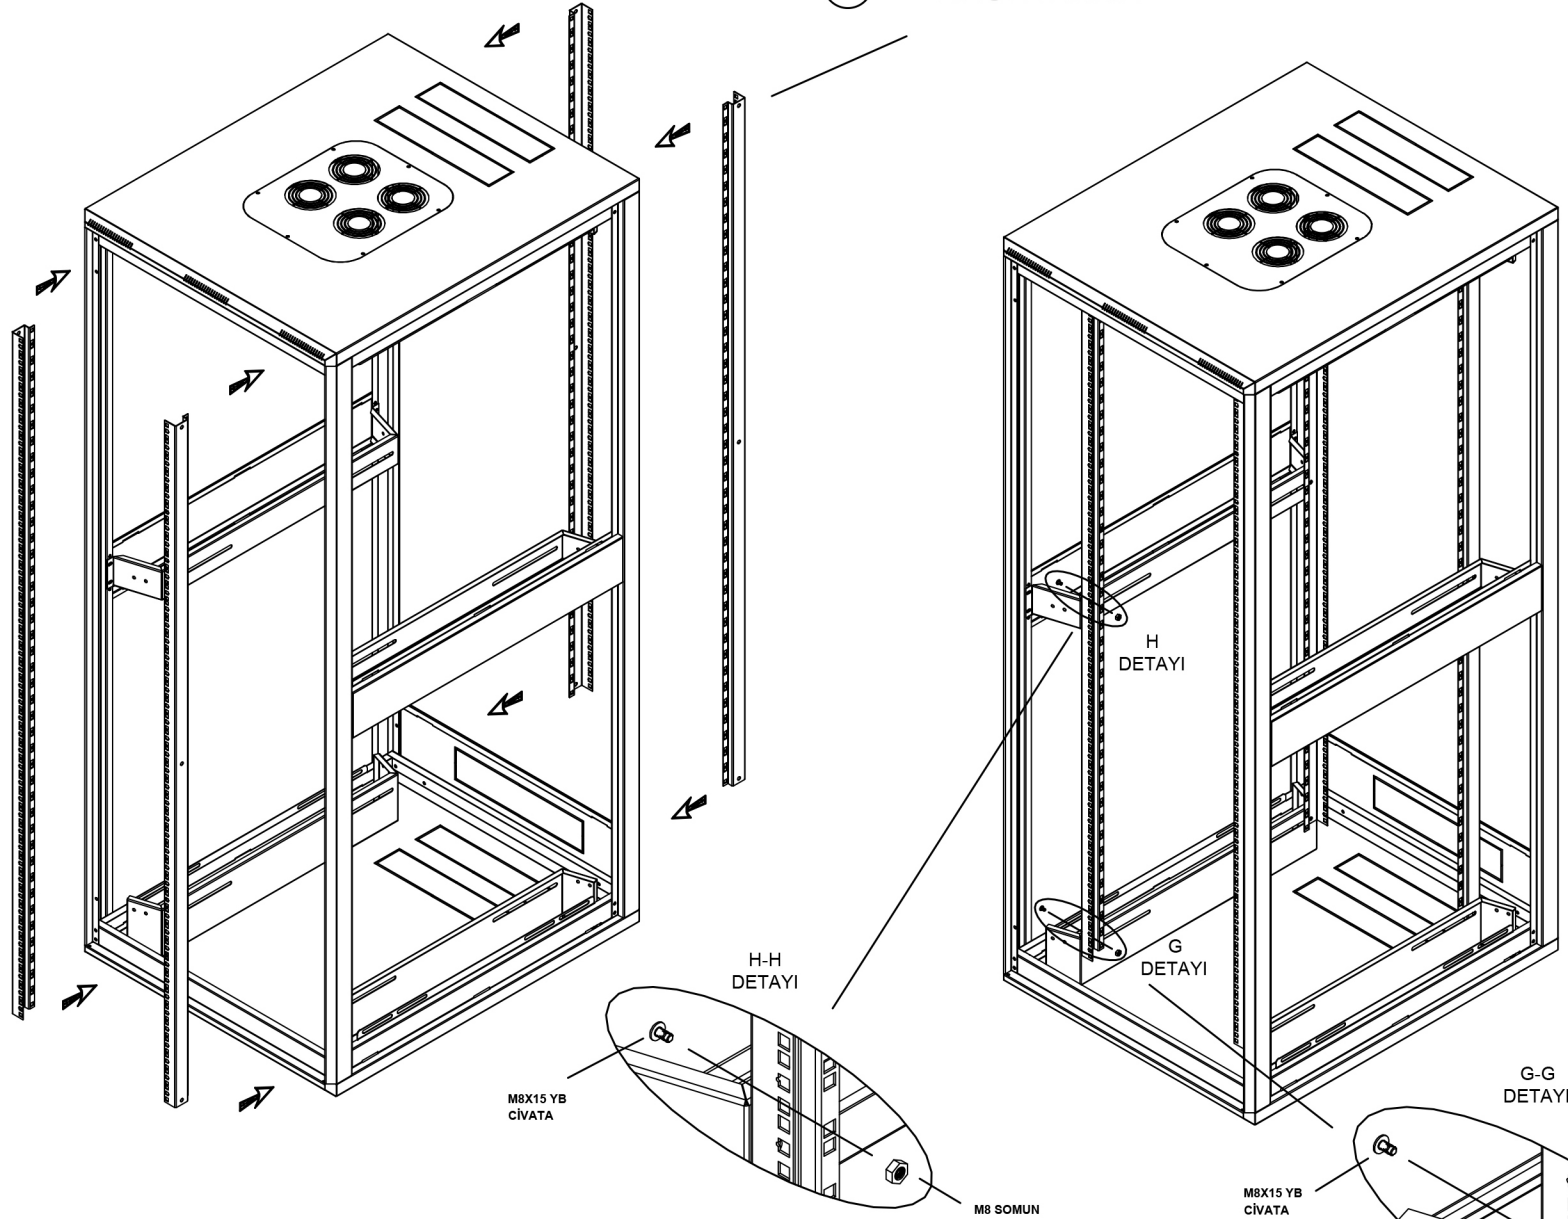

Rack dikmelerini yan derinlik atkısına (H-H) detayında gösterildiği şekilde uygun civata ve somun ile vidalayınız. Diğer köşelerde aynı işlemi uygulayınız.

Rack dikmelerini (G-G) detayında gösterildiği şekilde uygun civata ve somun ile alt taban ve üst tavana vidalayınız. Diğer köşelerde aynı işlemi uygulayınız.

Not: Yan derinlik atkısı 34U ve üzeri kabinlerde kullanılmaktadır.

6

8

YAN ÜST KAPAK

9

YAN ALT KAPAK

K
DETAYI

K-K
DETAYI

Kapıyı sabitleme bükümü

Yan alt ve üst kapakların alt kısmında (K-K)detayında gösterilen kapıyı sabitleme bükümleri alt tabanda ve yan bölme parçasındaki uygun yarıklara yerleştiriniz.Daha sonra kilitleme işlemini yapabilirsiniz.

Not: Alt ve üst yan kapaklar sadece 42U 600x1000 ve 42U 800x1000 ölçülerindeki kabinlerde kullanılmaktadır.

7

Camlı ön kapagın üst kısmında (D-D) detayın gösterildiği gibi yaylı pimi aşağı doğru çekerek üst tavandaki pim deligine yerleştiriniz.

D-D
DETAYI

D
DETAYI

11

ARKA KAPAK

M
DETAYI

12

CAMLI ÖN KAPAK

F
DETAYI

T
DETAYI

T-T
DETAYI

F-F
DETAYI

Camlı ön kapagın alt tabanda
yerleştirileceği pim deligi

Kapağı sabitleme bükümü

M-M
DETAYI

Camlı ön kapagın alt kısmında (F-F)detayında gösterilen kapagın geçme pimini alt tabanda uygun delige yerleştiriniz.